

ENERGY METERS

# Installation Guide

wallbox ™

# Purpose and Scope of the Document:

The purpose of this document is to outline the instructions for installation of energy meters compatible with the Power Boost and Eco-Smart functionalities.

For instructions to install an MID meter, refer to the relevant **Installation Guide**.

# Important Notes

- 1.** After the installation, connect the energy meter before closing your charger. In case the charger had already been installed, open it to connect the energy meter.
- 2.** Only energy meters delivered by Wallbox are compatible.
- 3.** The installation must be performed only by suitably qualified personnel, according to local regulations.

# Important Notes

- 4.** Make sure to update your charger with the latest software version before installing the meter.
- 5.** Ensure the charger is powered off before connecting the meter.
- 6.** For more information, refer to your charger's **Installation Guide** on Wallbox Academy.

# Materials and Tools

## Inside the Box



Meter



Meter Wiring  
Guide



Grommet



Dynamic Power  
Sharing Installation  
Manual

## Devices



Pulsar Plus



Commander 2



Copper SB

# Materials and Tools

## Tools

**A**



**Philips  
Screwdriver**

**B**



**Cutting Pliers**

**C**



**Torx T9**  
Pulsar Plus  
Commander 2

**D**



 
**Torx T20**  
Copper SB

**E**



**Wire  
Strippers**

**F**




**Recommended  
Cable**  
(STP Class 5E  
500 Max Length)

# Compatibility Table

<b>Meters</b>	<b>Power Boost</b>	<b>Eco-Smart</b>
EM340	PF.A / PF.B	PF.B
EM112	PF.A / PF.B	PF.B
SPM1-100-AC	✓	✗
EM330 CTA 5X 250 A 5A CTA 6X 400 A 5A CTD-6S 600 5A	✓	✓
N1CT	✓	✓
PRO2 MOD	✓	✓
PRO380 MOD	✓	✓

# Placement

1. Place the energy meter after the mains supply in the fuse box.

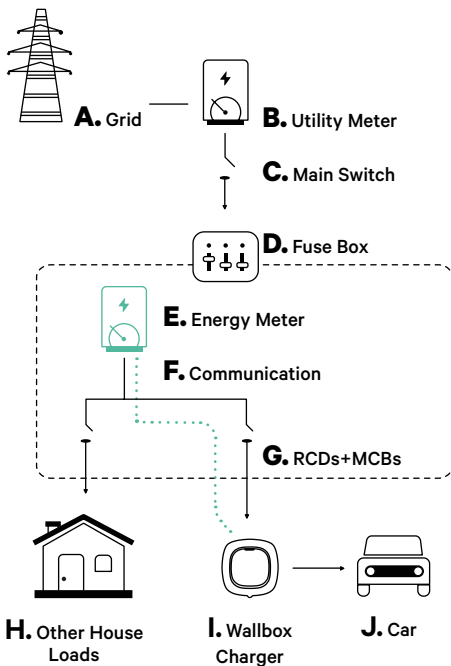



# Placement

- 2.** For all the meters, follow the corresponding manual included in the box.


## EM 340\*



## EM 112



## EM 330

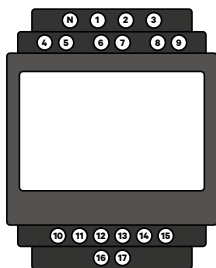


- A.** 3-Phase < 65 A    **B.** 1-Phase < 100 A    **C.** 3-Phase < 250 A

**Note:** For the EM340 and the EM112 meters, only the PF.B versions are compatible with the Eco-Smart functionality.

For the Power Boost functionality, both the PF.A and PF.B versions of EM340 and EM112 meters are compatible.

Refer the Eco-smart configuration article to know more.

# SPM1-100-AC\*

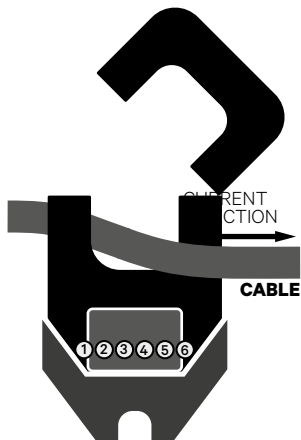


- 1.** Used for 1-Phase installation. Up to **100A**.
- 2.** Clip the power meter to the mains power cable.
- 3.** Neutral cable must not be drawn through the clamp.


**Note:** Ensure to insert the cable through the clamp in the correct direction as shown.

\*Not compatible with the Eco-Smart functionality.


# Pro MOD2 / Pro 380 MOD / N1 CT

 

**A.** 1-Phase < 100A


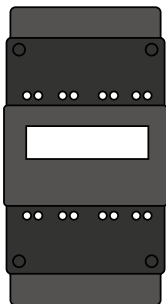


**B.** 3-Phase < 65A

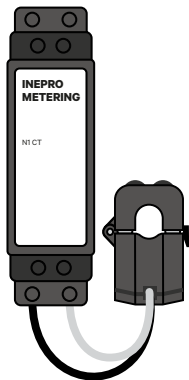


**C.** 1 - Phase < 80A


# Pulsar Plus

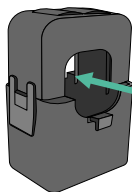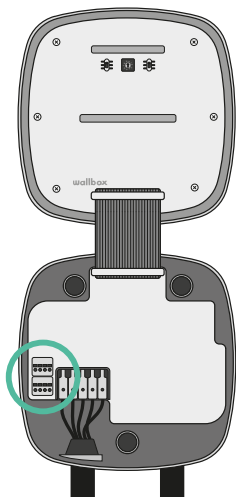


Current  
Direction

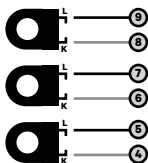


**EM 112**

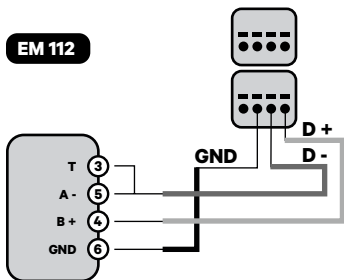


**EM 340**

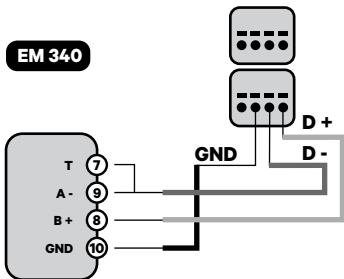

**EM 330**

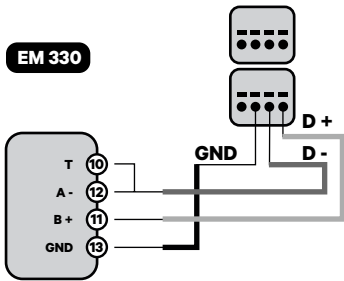


## N1 CT

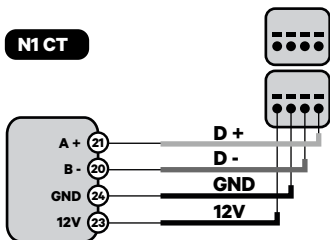


## SPM1-100-AC


Only Power Boost

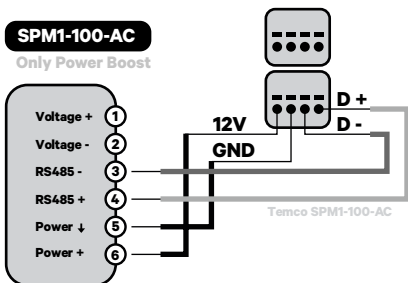


## Pro MOD2

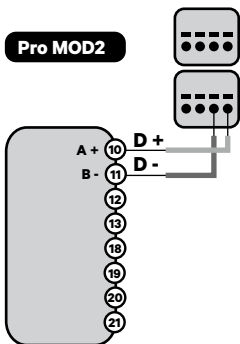


## Pro 380 MOD

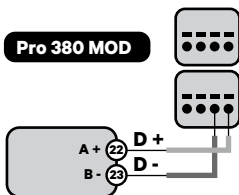


# Commander 2

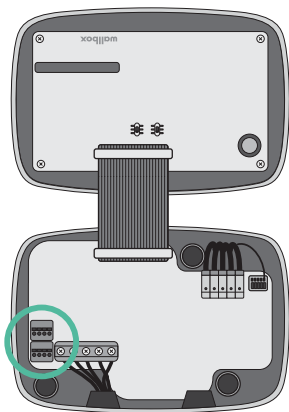


**EM 112**

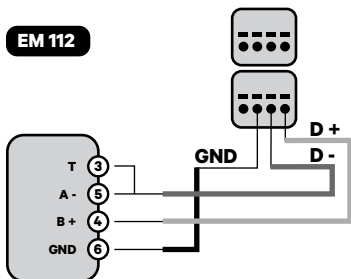


**EM 340**

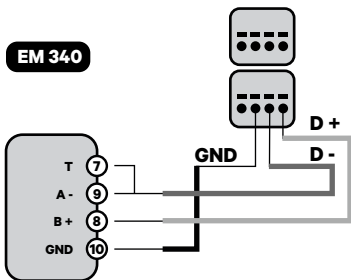


**EM 330**

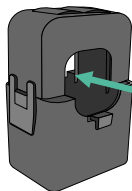

Current  
Direction

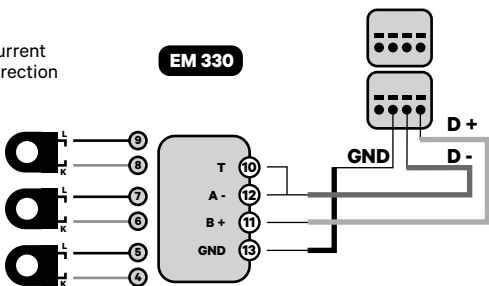


## N1 CT

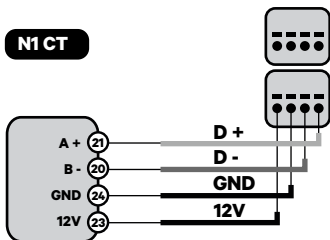


## SPM1-100-AC


Only Power Boost

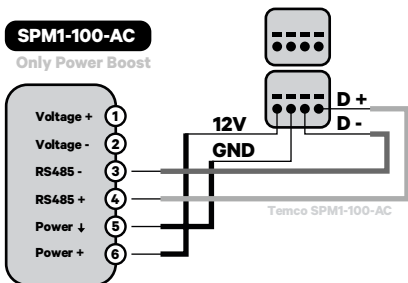



## Pro MOD2

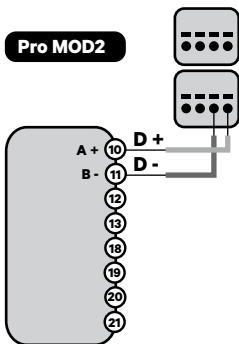


## Pro 380 MOD

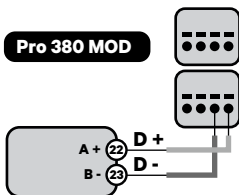


# Copper SB

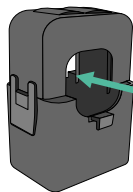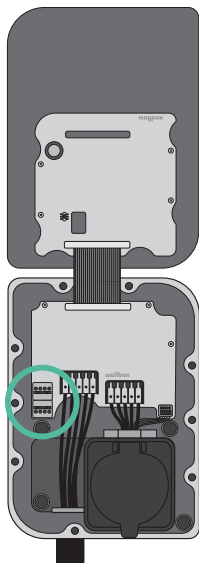


Current  
Direction

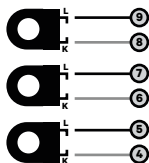


**EM 112**

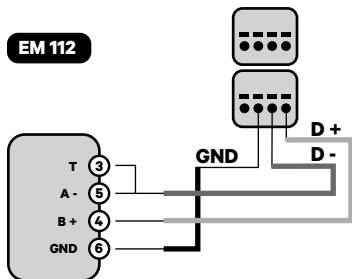

**EM 340**

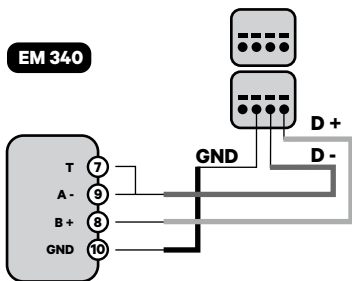


**EM 330**

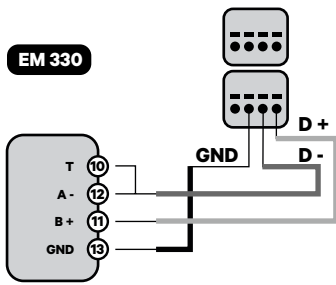




## N1 CT

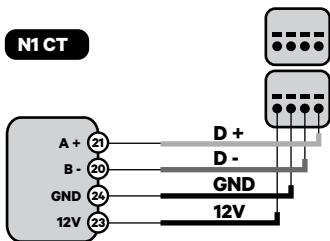


## SPM1-100-AC


Only Power Boost

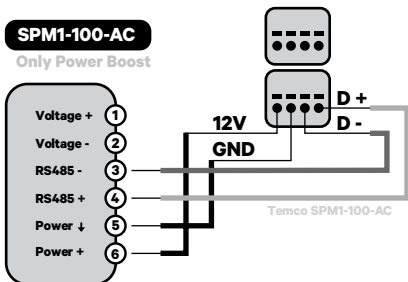

## Pro MOD2

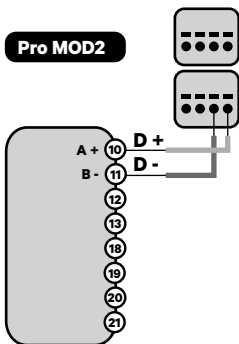

## Pro 380 MOD

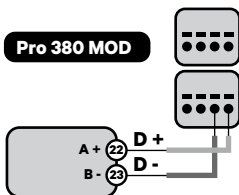

# Configuration

## Power Boost

Follow these steps to configure the **Power Boost** functionality.

## Eco-Smart

Follow these steps to configure the **Eco-Smart** functionality.



[support.wallbox.com](https://support.wallbox.com)